




ARIES ROUND HEATER- Installation Diagram for Separate Control (NS)

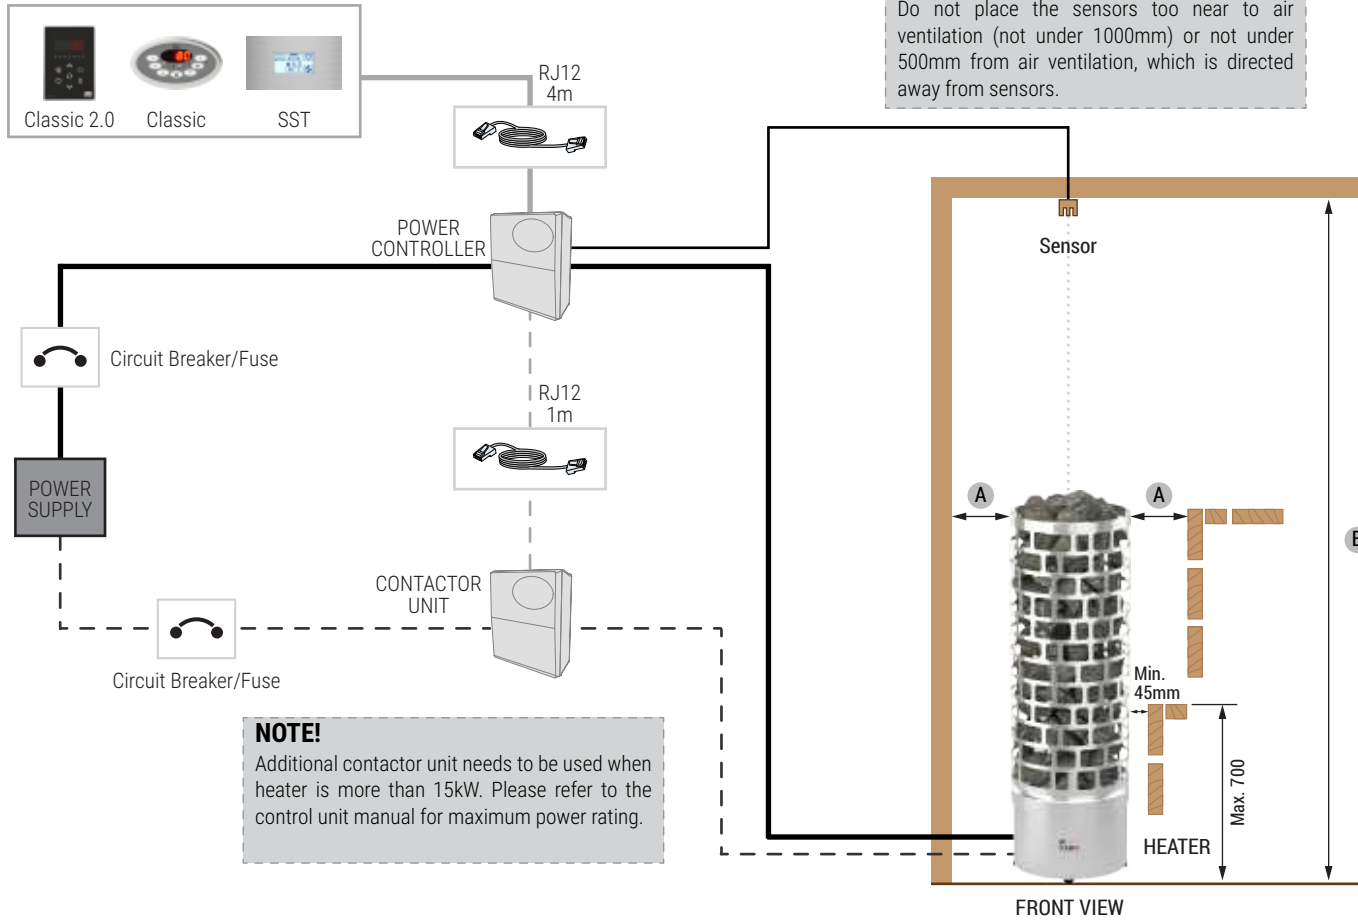


NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE!
Additional contactor unit needs to be used when heater is more than 15kW. Please refer to the control unit manual for maximum power rating.

Minimum Safety Distances


Heater Model	A	B
ARI3-45NS	100	1900
ARI3-60NS	100	1900
ARI3-75NS	100	1900
ARI3-90NS	100	1900
ARI6-90NS	100	1900
ARI6-105NS	100	1900
ARI6-120NS	100	2100
ARI6-150NS	100	2100
ARI6-180NS	125	2100

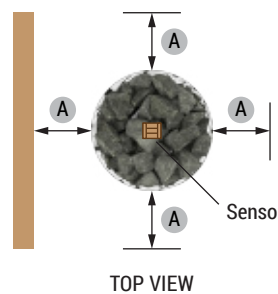




ARIES ROUND HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

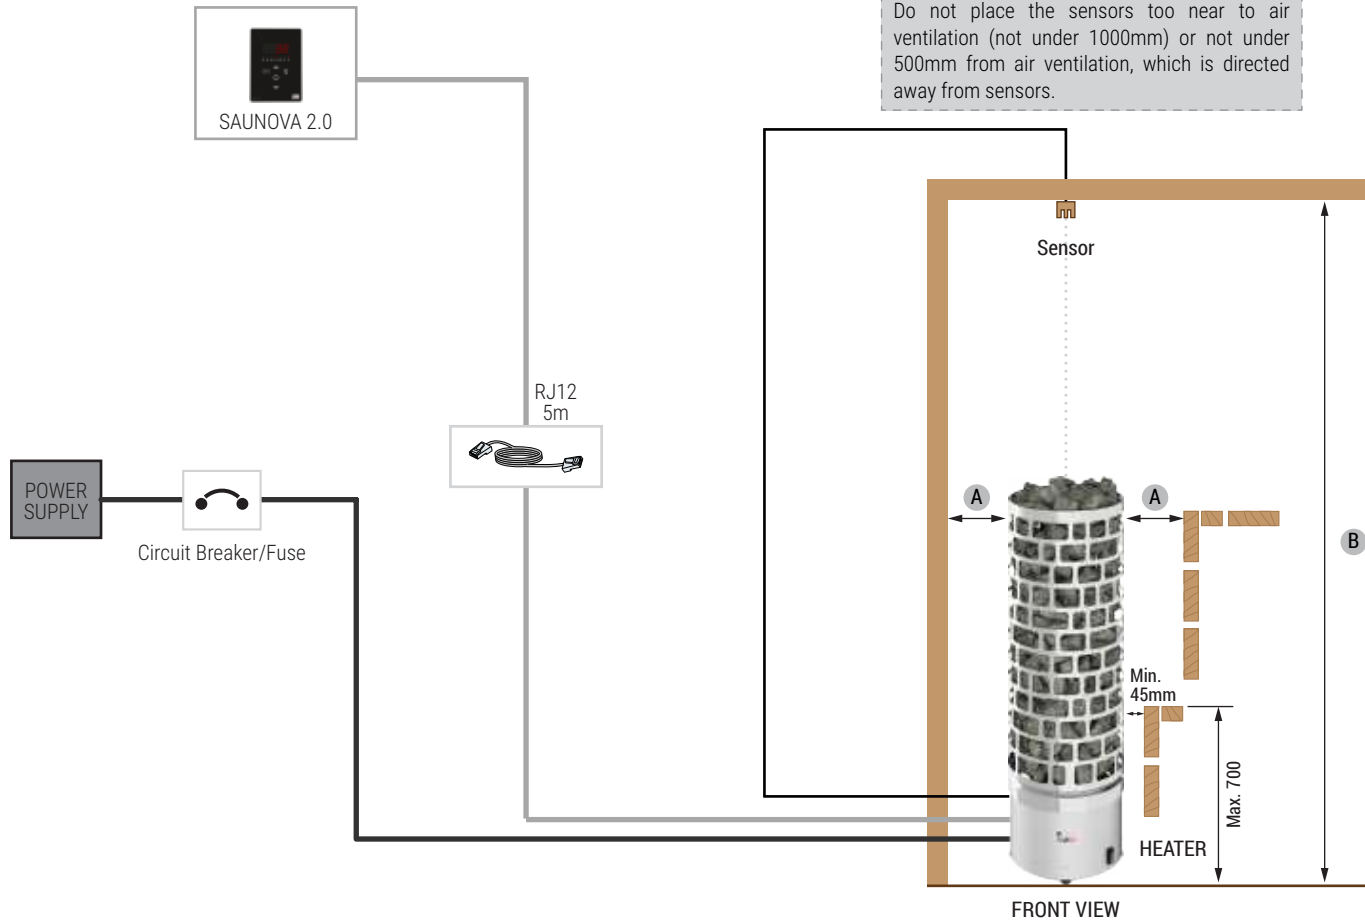


Minimum Safety Distances

Heater Model	A	B
ARI3-45Ni2	100	1900
ARI3-60Ni2	100	1900
ARI3-75Ni2	100	1900
ARI3-90Ni2	100	1900

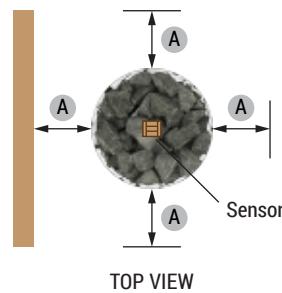




ARIES ROUND HEATER- Installation Diagram for Built-in Control (NB)

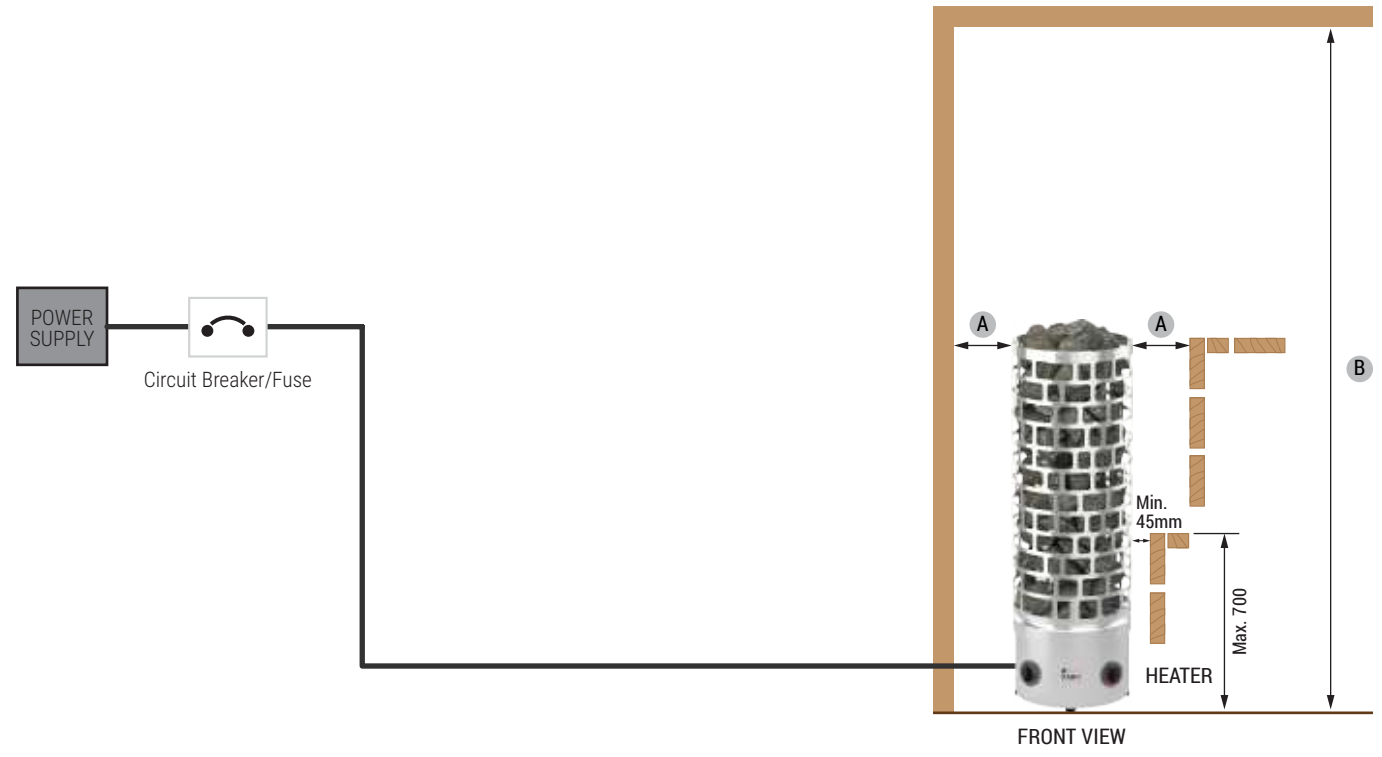

FRONT VIEW

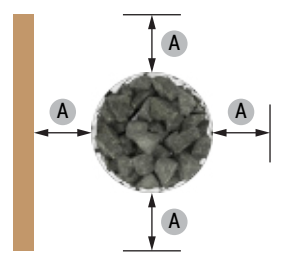

TOP VIEW

Minimum Safety Distances

Heater Model	A	B
ARI3-45NB	100	1900
ARI3-60NB	100	1900
ARI3-75NB	100	1900
ARI3-90NB	100	1900
ARI6-90NB	100	1900