


CIRRUS HEATER- Installation Diagram for Separate Control


NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

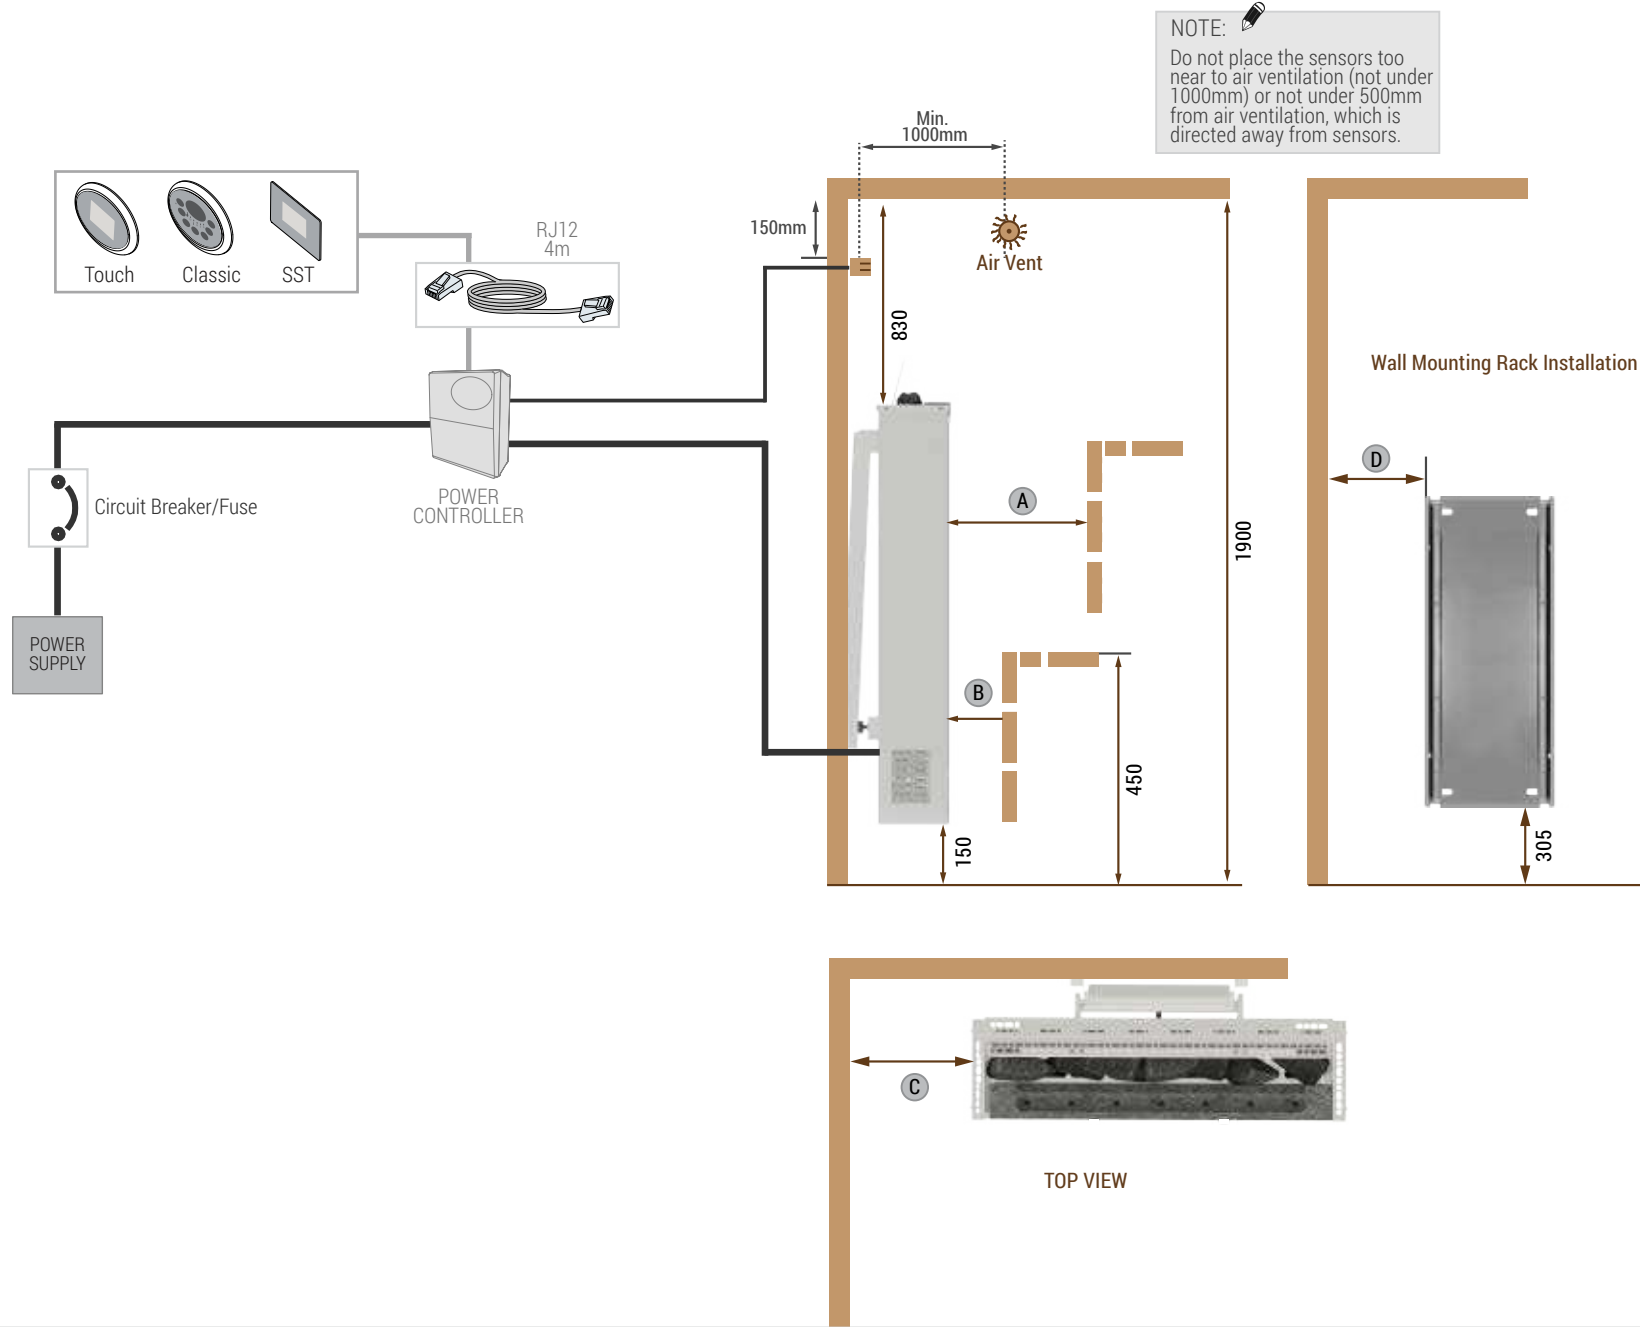

Minimum Safety Distances

	A	B	C	D
CIR2-30NS	250	100	75	150
CIR2-40NS	250	100	75	150
CIR2-50NS	300	100	75	150
CIR2-60NS	350	100	100	175
CIR3-45NS	300	100	75	230
CIR3-60NS	350	100	100	255
CIR3-75NS	400	100	100	255
CIR3-90NS	450	100	125	280

CIRRUS HEATER- Installation Diagram for Built-in Control

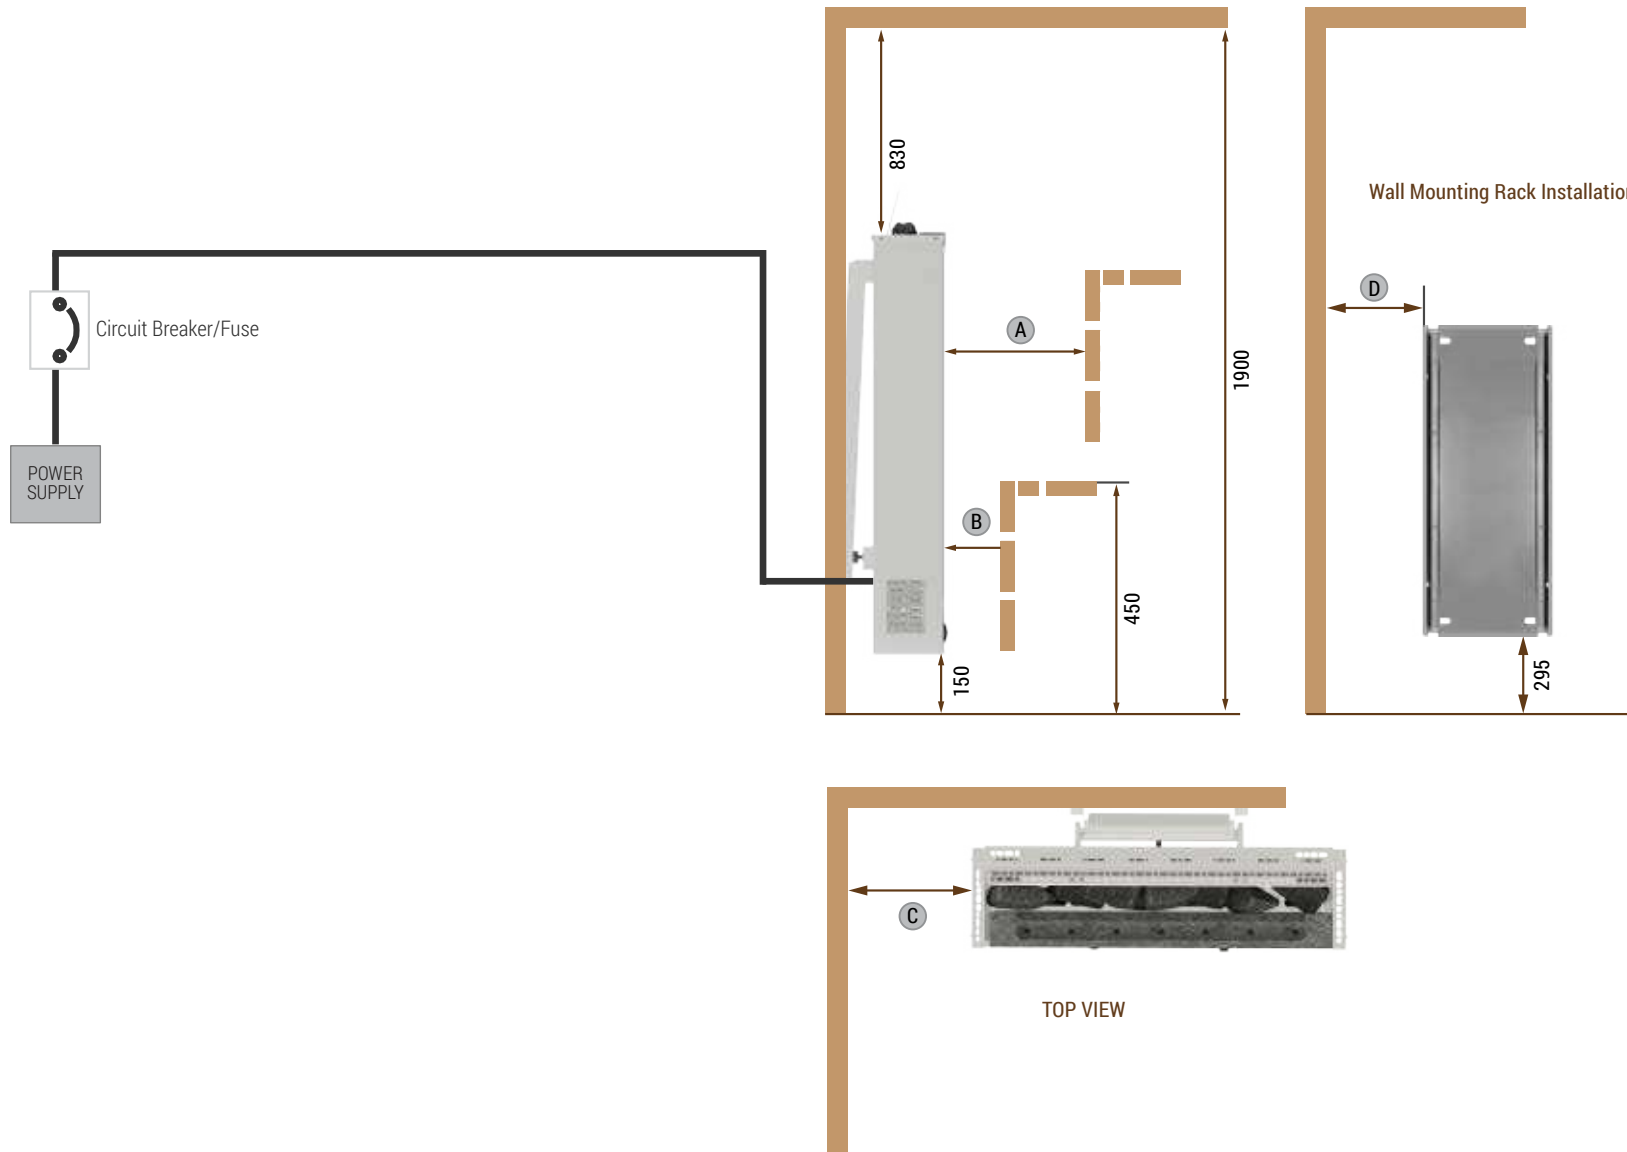

Minimum Safety Distances

	A	B	C	D
CIR2-30NB	200	100	75	150
CIR2-40NB	200	100	75	150
CIR2-50NB	275	100	75	150
CIR2-60NB	300	100	100	175
CIR3-45NB	250	100	75	230
CIR3-60NB	300	100	100	252
CIR3-75NB	350	125	100	255
CIR3-90NB	400	125	125	280