



NIMBUS COMBI HEATER- Installation Diagram for Separate Control (NS)

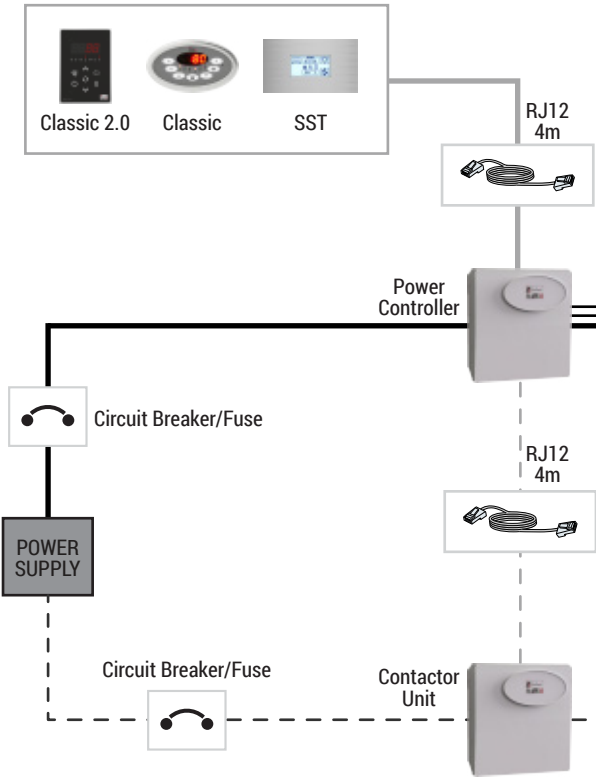


NOTE!
Additional contactor unit needs to be used when heater is more than 15kW. Please refer to the control unit manual for maximum power rating.

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

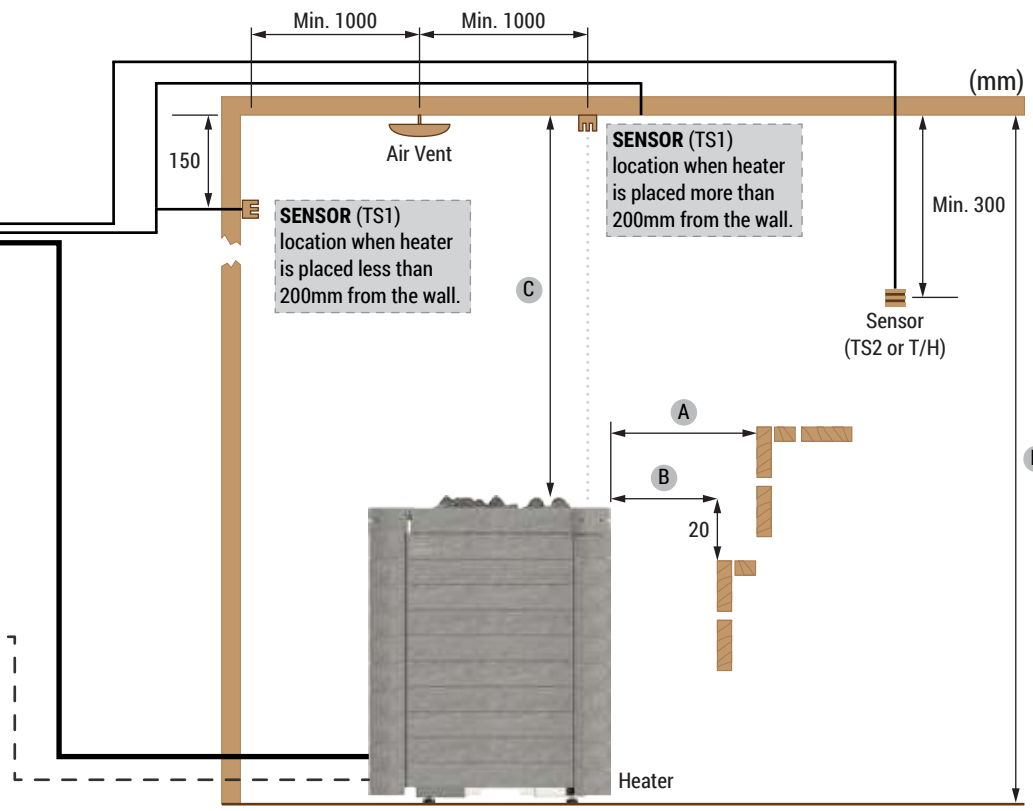

FRONT VIEW

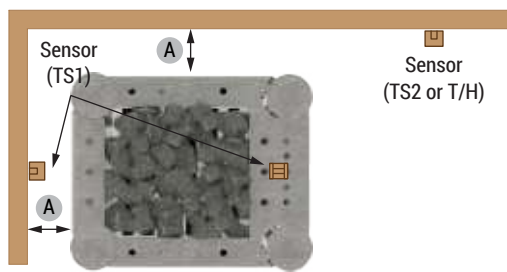

TOP VIEW

Minimum Safety Distances

Heater Model	A	B	C	D
NIMC-90N	50	30	1200	1900
NIMC-105N	50	30	1200	1900
NIMC-120N	130	70	1400	2100
NIMC-150N	160	100	1400	2100
NIMC-180N	160	100	1400	2100