

CUBOS HEATER- Installation Diagram for Separate Control (NS)

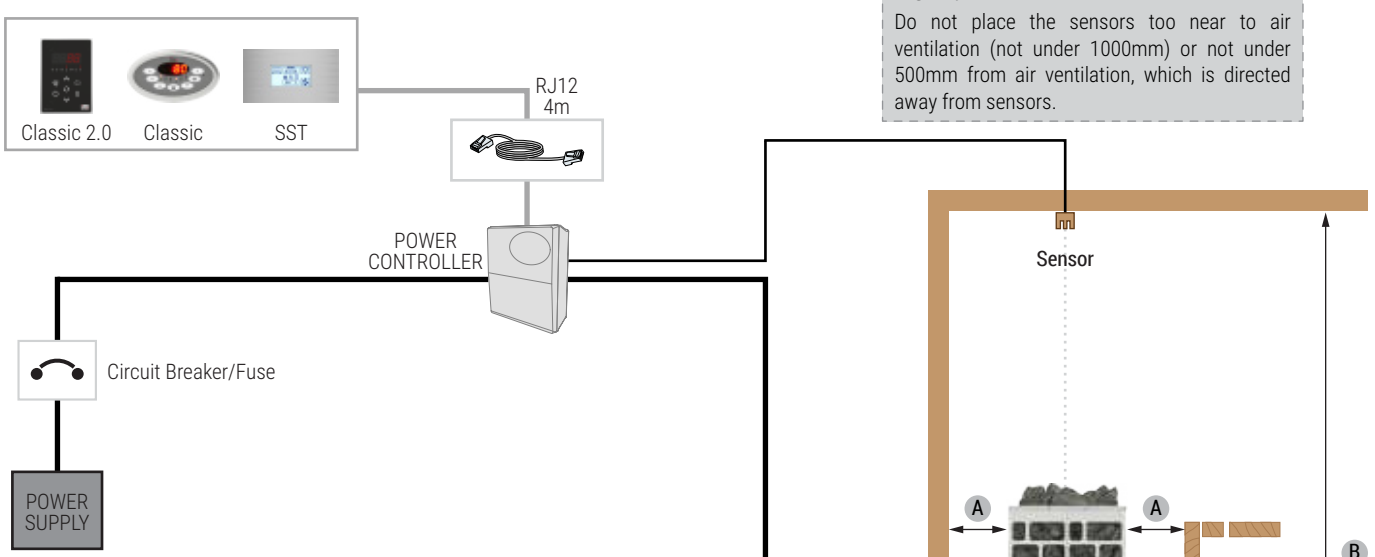


NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

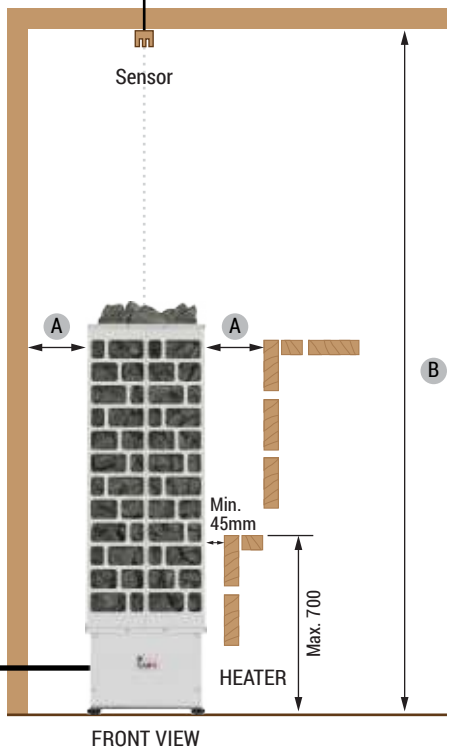


FRONT VIEW

Minimum Safety Distances

Heater Model	A	AA	B
CUB3-45NS	100	100	1900
CUB3-60NS	100	100	1900
CUB3-75NS	100	135	1900
CUB3-90NS	125	135	1900

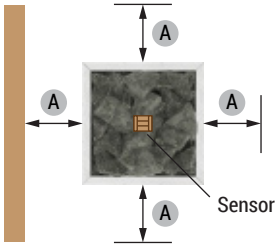


Middle Installation

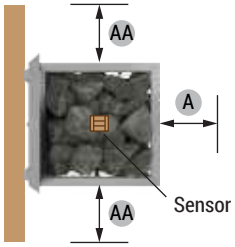

Wall Installation
with Protective Cover


TOP VIEW

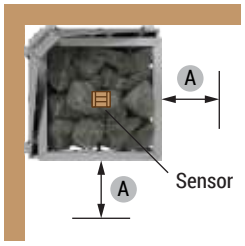

Corner Installation
with Protective Cover


CUBOS HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

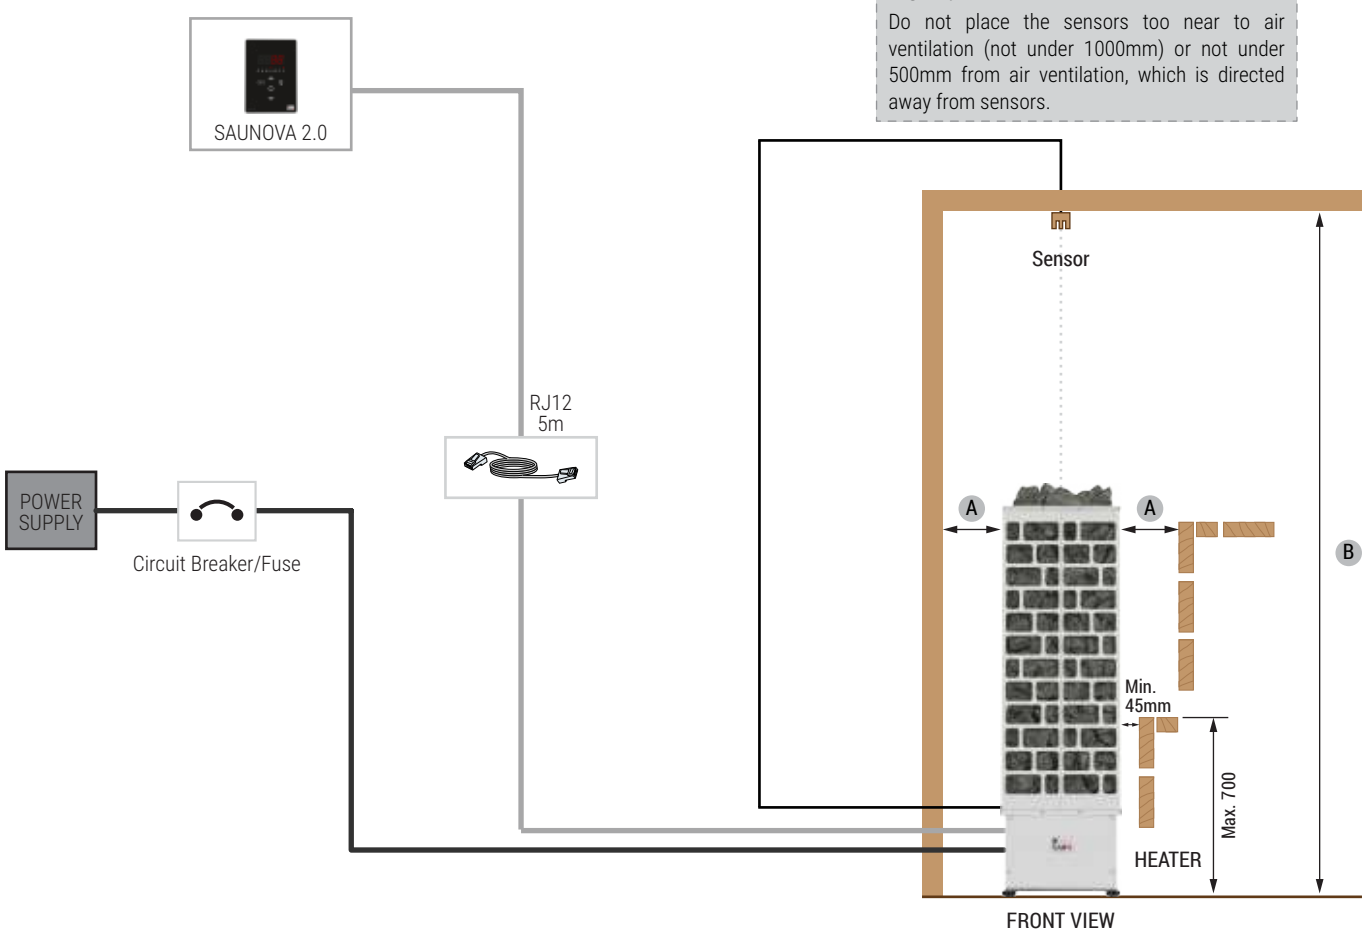


Minimum Safety Distances

Heater Model	A	AA	B
CUB3-45Ni2	100	100	1900
CUB3-60Ni2	100	100	1900
CUB3-75Ni2	100	135	1900
CUB3-90Ni2	125	135	1900

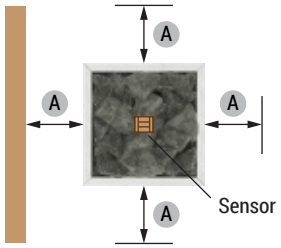


Middle Installation

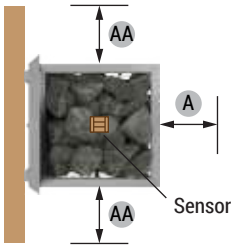


Wall Installation
with Protective Cover

TOP VIEW

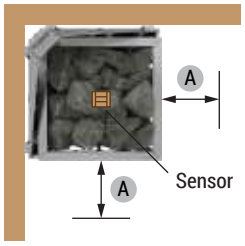

Corner Installation
with Protective Cover

CUBOS HEATER- Installation Diagram for Built-in Control (NB)

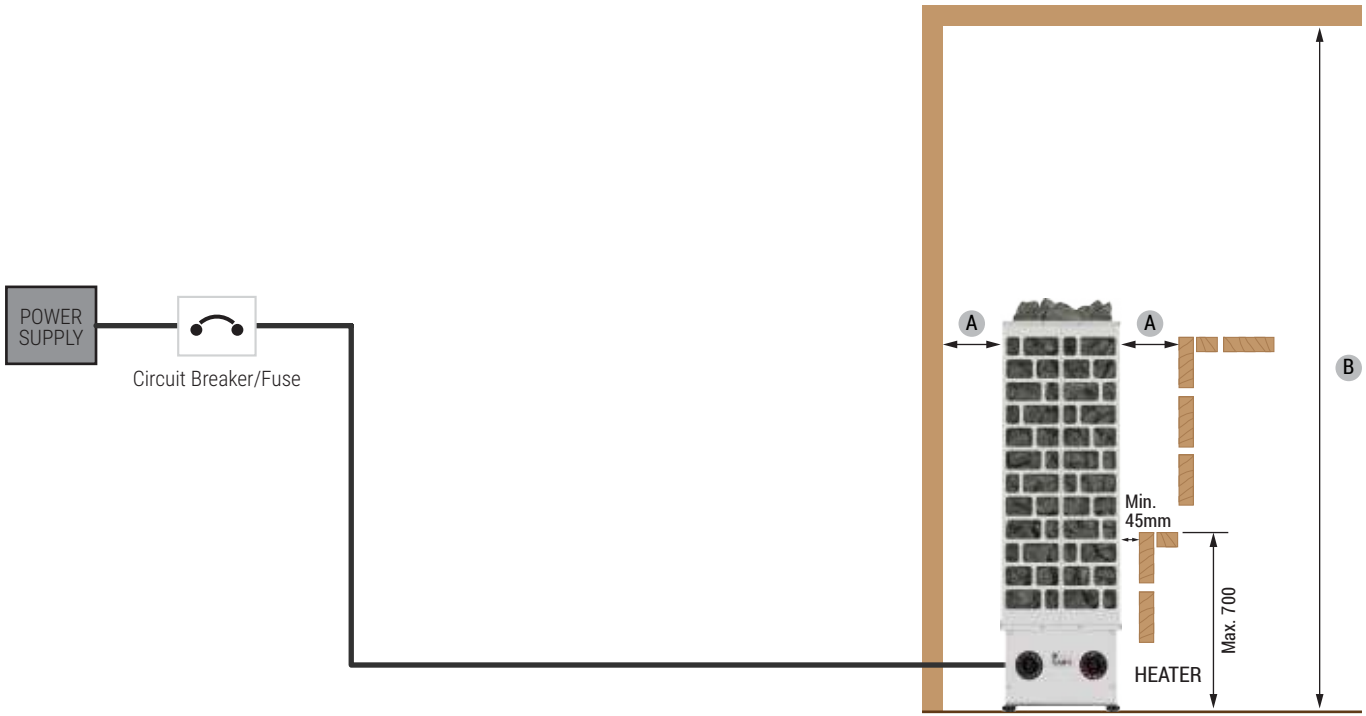

Minimum Safety Distances

Heater Model	A	AA	B
CUB3-45NB	100	100	1900
CUB3-60NB	100	100	1900
CUB3-75NB	100	135	1900
CUB3-90NB	125	135	1900

